

BEDIENUNGSANLEITUNG OPERATING INSTRUCTIONS

tastaturen.com®
A GeBE COMPANY

www.tastaturen.com®

Cirque Smart Cat PRO Cirque Smart Cat Cirque Easy Cat



System requirements	The touchpads require a PC-compatible computer.
Software requirements	<p>Cirque's GlidePoint® touchpads operate as a standard mouse on the PC platform and require no additional software for basic functions.</p> <p>The Cirque GlidePoint® driver software adds additional features and control to the touchpad. The GlidePoint® driver is only available for the Windows® operating systems.</p> <p>The driver is available to download from our website www.tastaturen.com</p> <p>The USB version of the Cirque Easy Cat® also runs on Apple® Macintosh® computers with available USB ports.</p>
Installation instructions	Attach the USB connector to your computer. If you see the "New Hardware Found" dialog box after connecting the touchpad, follow the prompts (insert your Windows CD if prompted) to install a standard HID compliant mouse.
Basic functions	Unlike the mouse or trackball, Cirque GlidePoint® touchpads require little arm and wrist motion and no finger pressure. Yet you will soon find that using your finger is a more natural and intuitive way to control your computer. Simply glide your finger across the surface of the pad to move the cursor and tap your finger to "click". It's easy! .
To click  Tap once or twice	To click, lightly and quickly tap the surface of the pad once. Or, press the left button once.
To double-click	To double-click, tap twice on the pad or click the left button twice. Remember, the touchpad responds to a very light, crisp tap.
To right-click	To right-click for sub-menus, tap the tap zone in the upper right corner of the touchpad or click the right button once .

BEDIENUNGSANLEITUNG

OPERATING INSTRUCTIONS

tastaturen.com®
A GeBE COMPANY

www.tastaturen.com®

Drag, draw or highlight  Tap and drag	To drag, draw, or highlight, double-tap rapidly and hold your finger down on the second tap, then glide to move. You may also hold the left button as you glide your finger.
GlideExtend	GlideExtend®. To drag further than the pad surface, lift and reposition your finger after reaching the textured edge. GlideExtend® will virtually eliminate the edge of the pad while you drag. In other words, if you are dragging an item and you reach the textured edge, GlideExtend® will hold the drag function active for three seconds while you reposition and complete the drag. To shut off GlideExtend® earlier than three seconds, simply tap or click a button.
To scroll	To scroll, place your finger down the right edge of the touchpad and glide up or down.
Mac OS 	For Macintosh® OS X, click submenu access and wheel-mouse scrolling are supported. Older OS versions require the installation of third party software named *USB Overdrive. If interested in these features, you may download the latest version at www.usboverdrive.com
Advanced features	Your Cirque touchpad represents the latest in "capacitive touch" technology. All products are designed to give you the highest level of performance and include advanced features not available from the standard mouse.
Scrolling horizontally & vertically	Scrolling will allow you to move around in a scrollable document, similar to clicking on the scroll arrows or using the PAGE UP or PAGE DOWN keys.
Zooming	This allows you to increase or decrease the view size of your document in most Microsoft® Windows® applications.
Back/forward page control	You can use Cirque's back/forward feature to activate the back and forward controls of various applicationssuchasMicrosoft® InternetExplorer® and NetscapeNavigator®.
Programmable buttons and tap zones	Touchpad buttons and tap zones can be programmed to launch applications, open files or executespecificWindows® functions.A tap zone and mechanical buttons are available on all touchpad models. The Cirque Smart Cat PRO® has four additional programmable buttons (labeled A through D) on the touchpad surface.

BEDIENUNGSANLEITUNG OPERATING INSTRUCTIONS

tastaturen.com®
A GeBE COMPANY

www.tastaturen.com®

Product	Interface	Colour	Item no.
Easy Cat	USB	Grau	TT1044
Easy Cat	USB	Schwarz	TT1062
Easy Cat	PS/2	Grau	TT1014
Easy Cat	PS/2	Schwarz	TT1062
Smart Cat	USB	Grau	TT1047
Smart Cat	USB	Schwarz	TT1059
Smart Cat	PS/2	Grau	TT1015
Smart Cat	PS/2	Schwarz	TT1060
Smart Cat Pro	USB	Grau	TT1061
Smart Cat Pro	USB	Schwarz	TT1063

Further information is available on the CD included with your touchpad.